



# **FNC MAS 11**


## **MOUNTING GUIDE**



[www.fenac.com.tr](http://www.fenac.com.tr)

This document contains the required mounting clearances and installation guidelines for the MAS 11.

1. The product consists of two separate components: the read head and the magnetic ring.
2. The most important point during installation is that the product must be mounted within the specified installation tolerances. Otherwise, the product will not operate properly.

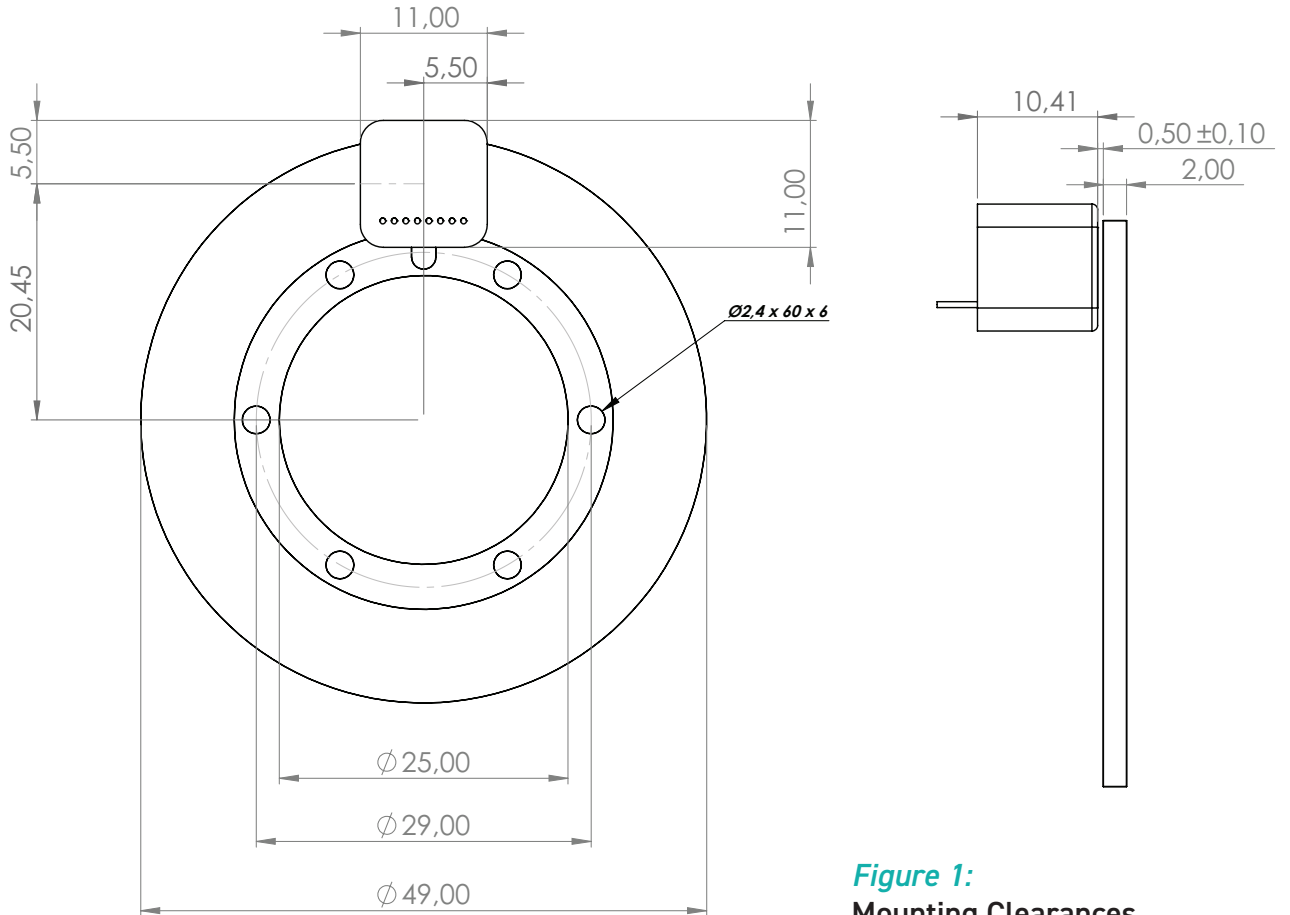

**Figure 1:**  
Mounting Clearances

1. The read head must be centered as shown in Figure 1.
2. The air gap between the read head and the magnetic disk must be measured using a feeler gauge before installation.
3. During installation, the read head must be mounted without any tilt and without causing damage to the magnetic disk.

The magnetic disk must not be damaged under any circumstances. Otherwise, the product will not operate at the specified performance.